


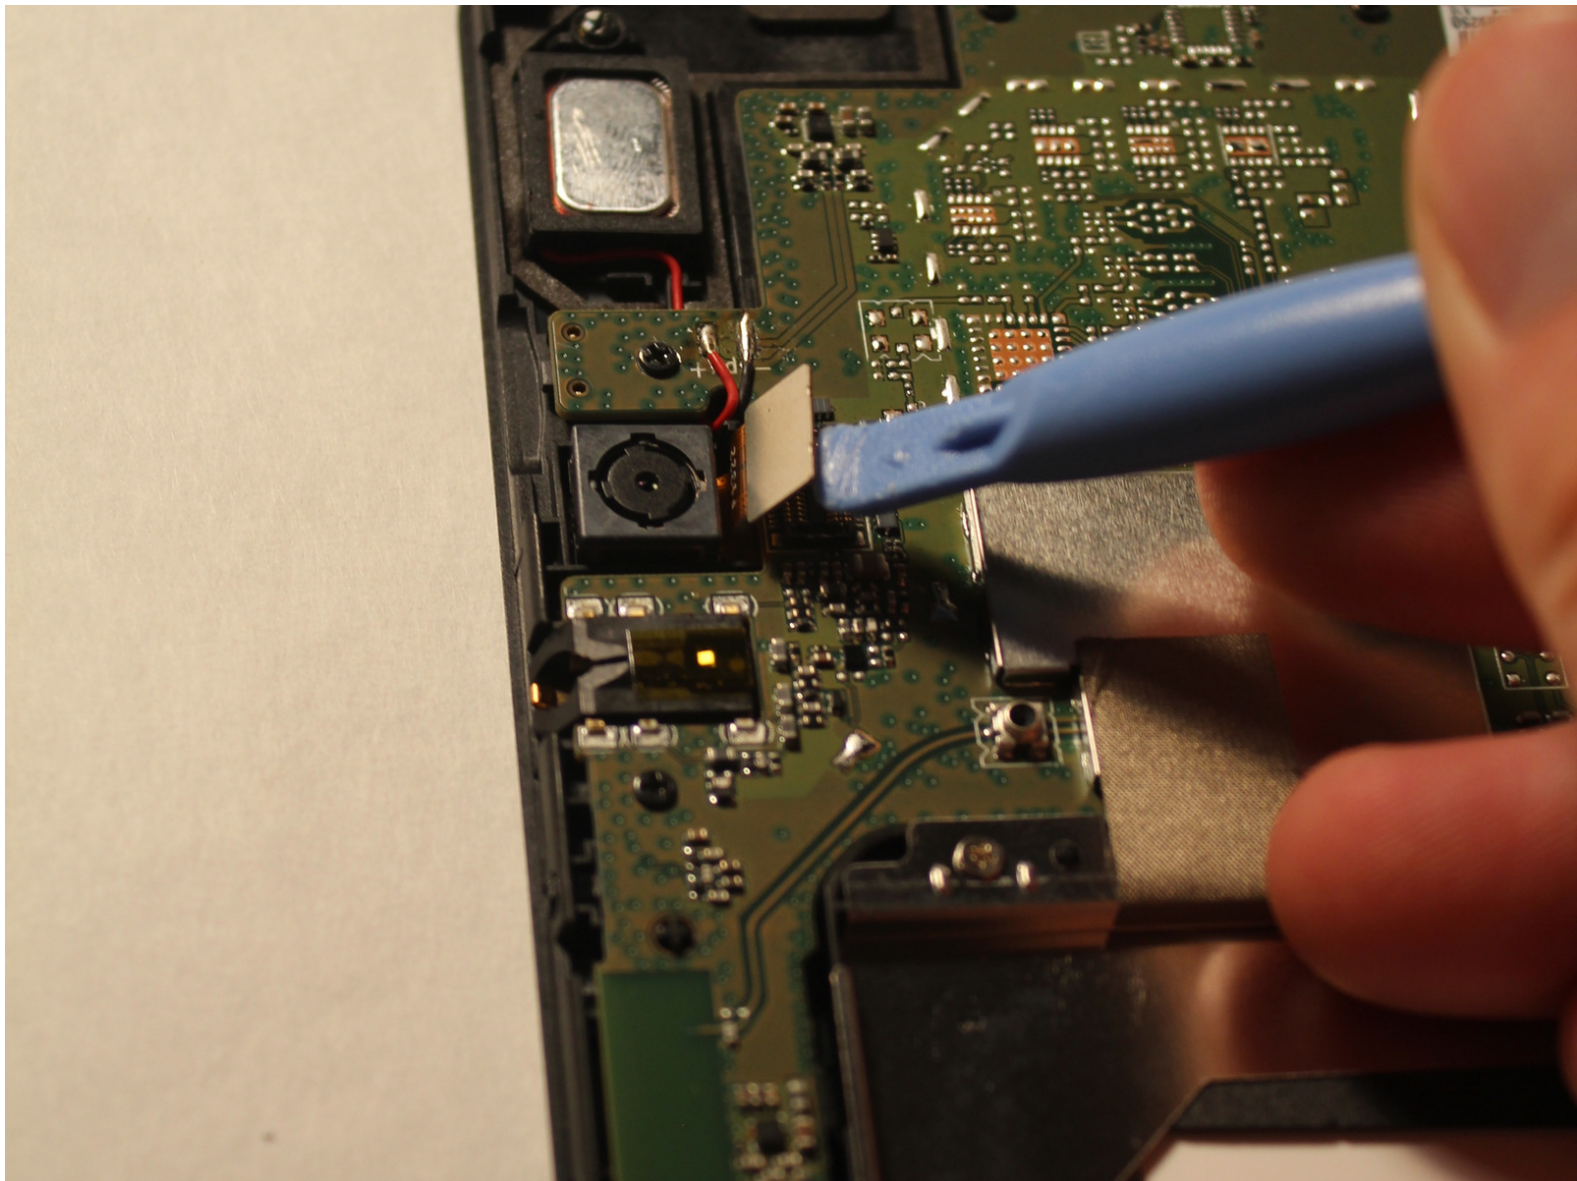

Lenovo Ideatab S6000 Rear Camera Replacement

This is a guide to help users replace their rear camera.

Written By: Josiah Speed




Step 1 — Battery



- Remove speaker screens by working them loose with a plastic opening tool. You may need to first loosen them with iFixit tweezers or a craft knife.


⚠ These screens are held in place by glue and are hard to remove. Take your time.

Step 2

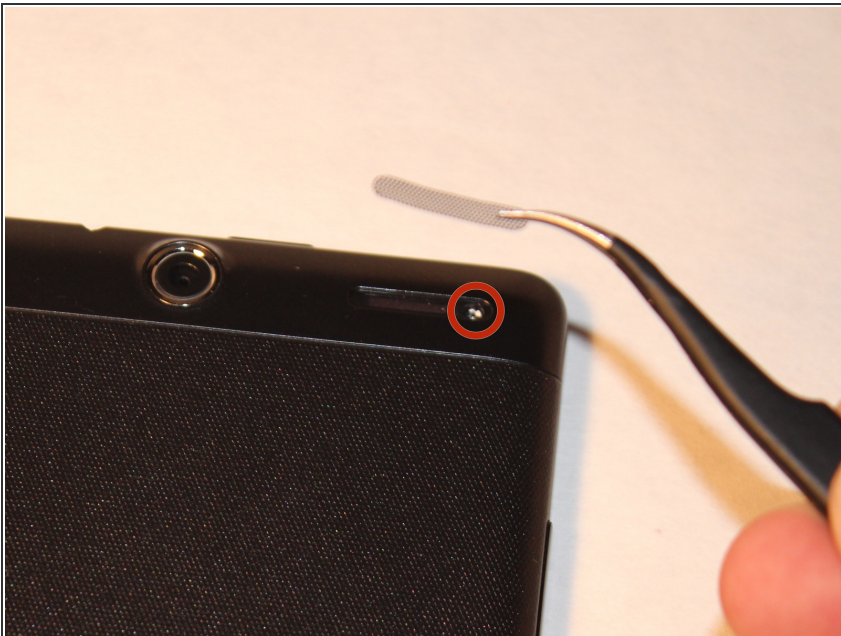

- Remove the 3.14" Philips screws from both spots that were covered.

Step 3

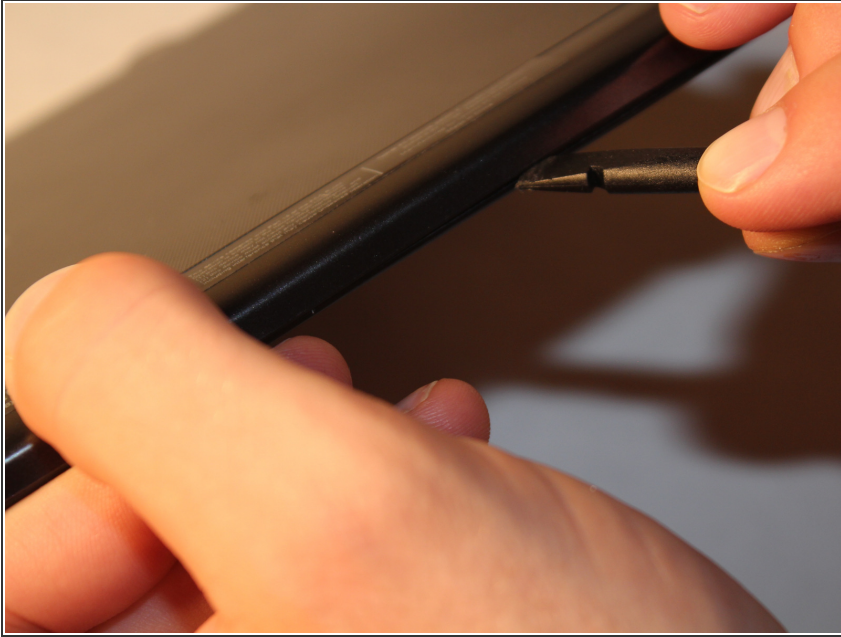

- Go all around the casing prying the screen away from the backing with a spudger.
- It will make a popping sound each time one of the lock tabs is disconnected.

⚠ DO NOT USE A METAL TOOL FOR THIS.


i Take your time as you move all around the device prying the backing off.

Step 4



- Pull off the plastic covering the battery cable.

Step 5

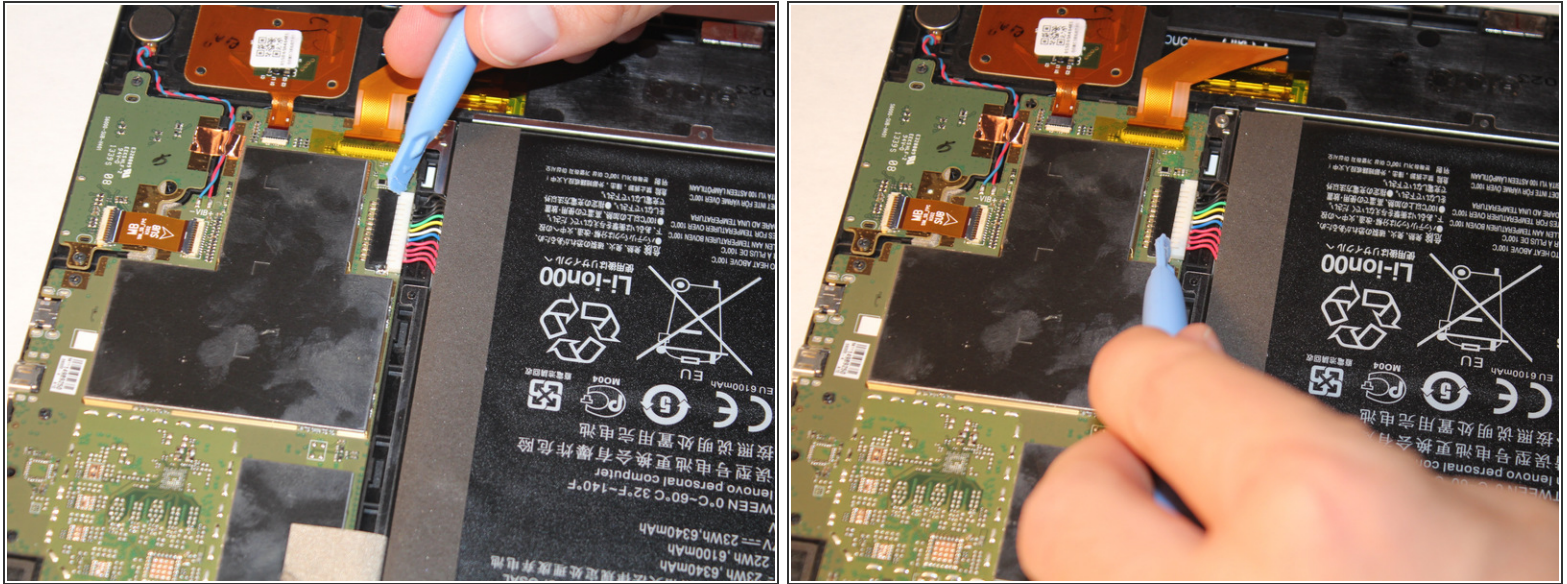


- Gently pull on both sides of the plug to release it with either a plastic opening tool or your fingers.

Step 6





- Remove the battery by grabbing the tab shown and pulling up.
- The battery is held to the device by a bit of adhesive. Just pull the battery up from the tab and it will lift out with a bit effort.

Step 7 — Rear Camera

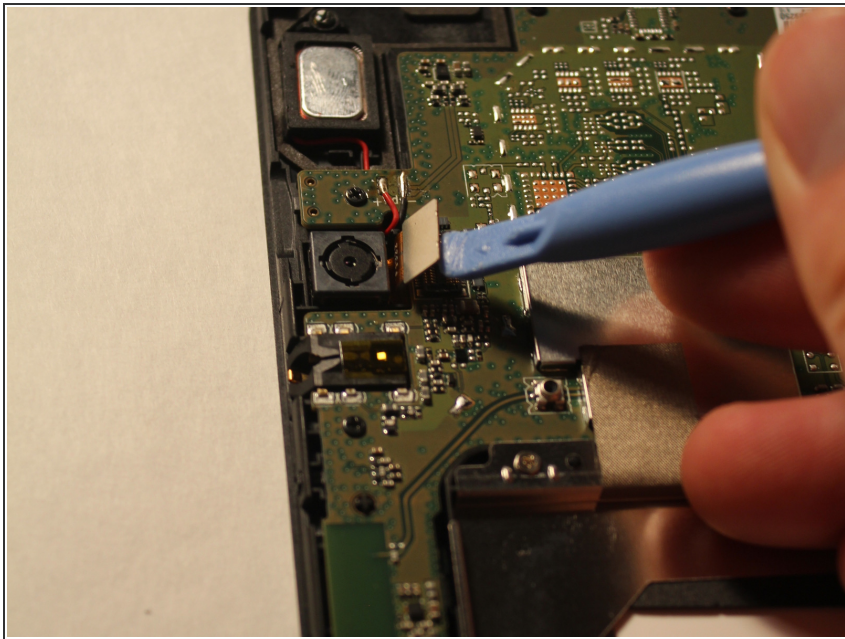

- Gently lift up on the metal connector plate.

Step 8 — Removing Rear Facing Camera.

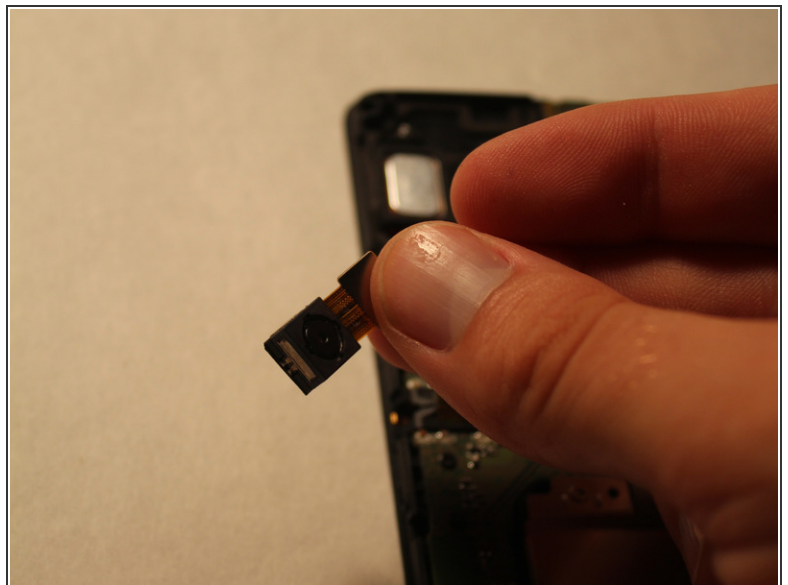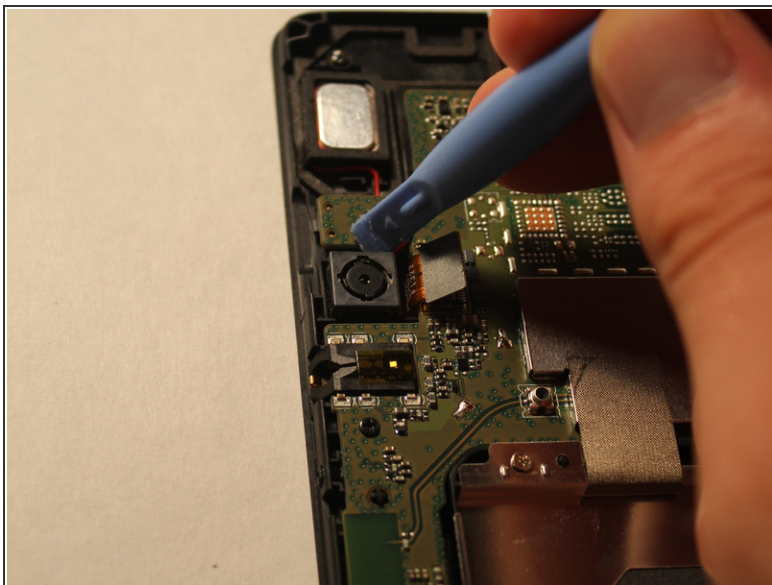

- Push against the camera from all sides to loosen it from its position.

(i) NOTE: The camera is connected by glue, so take your time, it will come out.

(★) If you wish to replace the camera simply plug in the new camera, and follow the guide in reverse.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 02:20:11 PM.